
Specification

Product	Energy Saving Ceiling Fan	
Style No.	JD-2000	
Input Voltage	DC 24V	
Frequency	60Hz	
Power Condumption	23.5W	
Low Noise	33dB	
Fan blade numbers	3	
Weight	4.8kg	
Dimensions	W603×D603×H210mm	
Timer	1/2/4/8 hrs	

Energy Saving DC Ceiling Fan

User Manual

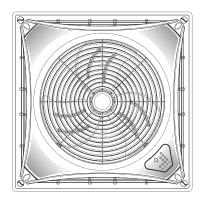



Cautions

- Please read this manual carefully before installation and use.
- •Upon completing the installation, please make sure to hand this manual to the customer.

JD-2000

Maintenance

- 1. Turn the fan off and unplug the power, verify that the fan blade is no longer spinning.
- Remove the screws from the fan and clean it with warm moistened soft cloth only.
 DO NOT pour or splash water on the fan.
 DO NOT use any abrasive or harsh cleaners, as this may damage the unit.
- 3. DO NOT polish the plastic part, or it will cause color change or damage.

Warranty Card

Dear customer,

Thank you for choosing JLA!

To protect your rights, please fill the following information properly and keep this card.

	Item Name:	Model No:	Dealer stamp
	Serial No:		_
	Date of purchase:		_
	Invoice No:		_
1	(

Warranty Coverage:

- The warranty period is one year from the purchased date. If weren't bought from dealers, the warranty is based on the date of manufacture plus two months
- This warranty card is needed when repairing the products.
- If the product doesn't operate properly when using the product according to the instruction, the repair/replacement will be FREE of charges.

Reasons would cause the invalidated of warranty:


- External software and hard ware peripherals installed.
- Environmental factors(ex: natural disasters, insects, rodents and etc.
- Doesn't follow the instruction.
- Un-authorized modification.
- External factors such as voltage misuse, improper device handling collisions, foreign invasion, chemical damaged and etc.
- Serial number or model number are different.

Warning:


- Pay on delivery
- This warranty is only for Taiwan.
- Warranty card is needed.
- Repair fee is needed if the product is out of warranty.

Safety Instruction


- 1. The fan should be installed in a proper location in order to get good air circulation.
- 2. Make sure the wires have been pre-installed on the fan location.
- 3. The fan should be installed by a licensed technician.
- 4. Before wiring fan, disconnect the power by turning off both the circuit breakers and its associated wall switch, connect the black wire to live line (black wire) and white wire to neutral line (white wire), and be sure no bare wires are visible after making connections.
- 5. The Energy Saving Ceiling Fan must be installed above 2.3 meters from the ground.
- 6. DO NOT install the fan close to a water heater or stove within 2 meters. NEVER install the fan above the heater or stove.

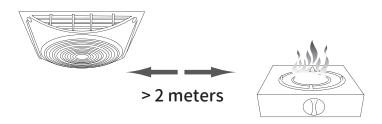

Parts List

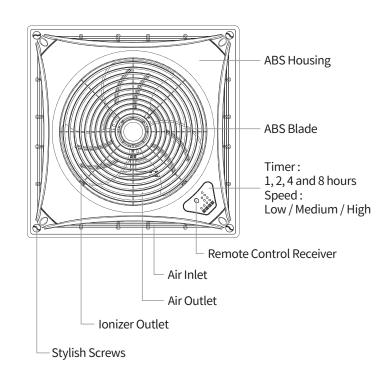


Installaion

 


1. Place the fan on the ceiling grid.



 3. Insert the wires into the terminal block.



 
2. Install the ceiling fan.




4. Make sure the wires are fixed securely.

Ceiling grid inner diameter

 Ceiling grid outer diameter

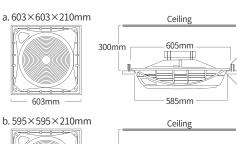





Operations

1. Speed:

There are 3 fan speeds: Low, Medium & High Speed. Press this button and the fan speed will change from Low, Medium & High for every press.

2. Timer:

Press this button to set up running time. The timer setting sequence is $1 \rightarrow 2 \rightarrow 4 \rightarrow 8$ hours for every press of the button. The fan will turn off automatically when the set time is up.

3. Olonizer:

Press this button to turn on & turn off the Ionizer function. When the light on is "ON" and press again light off is "OFF".

Note:

The ionizer is effective to absorb smoke from cigarette and the particles from fragrance oil/essential oil. Please prevent use above items near the fan when the ionizer is "ON" to prevent ceiling get dirty.

4. **O**N/OFF:

Press this button to turn the fan ON or OFF.



JD-2000 (DC 24V / 60Hz)